

From the box to signed in.

You need your phone for the first few steps. The full guide, with every step pictured, is at kiterelay.com/setup.

In the box

The KiteRelay unit ready to plug in

HDMI cable into the only socket on the left side

microSD card already fitted, leave it where it is

Power supply into the socket marked 5V, right side

USB-C cable C at both ends, from CTRL to the other computer

What goes where

LEFT SIDE

SMALL SCREEN


WHAT IT IS DOING, AND ITS ADDRESS



RIGHT SIDE

NETWORK SOCKET

A CABLE IS OPTIONAL

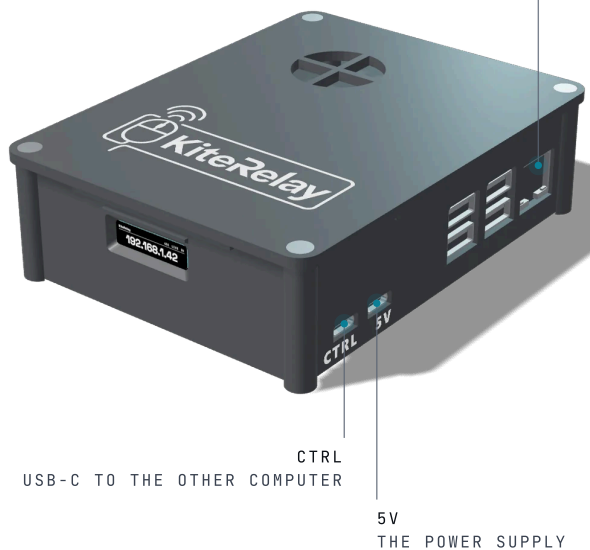

Plug it in

1. **HDMI** from the other computer's screen output into the left side of the box. No HDMI? An adapter from USB-C or DisplayPort to HDMI.
2. **USB-C** from **CTRL** into a USB-C port on the other computer. Only USB-A? A USB-C to USB-A cable.
3. **Power** into **5V**. Use the supply from the box, not the computer or a phone charger.

Setting up KiteRelay
Please wait

It starts. Leave it plugged in.

Creating identity

0 8 8 0 4 0 8 8 0 4 0 8
7 5 5 7 1 7 5 5 7 1 7 5

First start only: it makes its own keys.

1. **Open WiFi settings on your phone.** The box makes its own WiFi network for setup.
2. **Read the small screen.** Top line: the network, starting KiteRelay-. Bottom line, switching every four seconds: its password after Pw, and the address to open after Go.
3. **Join that network** with the password from the screen.
4. **The setup page opens by itself.** If it does not, type the address shown after Go into your browser. Read it off your own screen.
5. **Choose your home WiFi** and enter its password. The box remembers it.
6. **Write down the address it shows** on the page and the small screen. The setup network then disappears, which means it worked.
7. **Back on your home WiFi, open that address.** Your browser warns that the connection is not private. Expected: choose Advanced, then proceed.
8. **Create your sign-in.** A username, or blank for admin, and a password of at least ten characters.

KiteRelay-3927
Pw:39472753



Steps 2 and 3.

Connected!
192.168.1.42



Step 6: your address.

KiteRelay 45C LIVE 2h
192.168.1.42

Every day after that.

If the small screen says

Looking for WiFi	It is looking for a network it knows. Check the router; it opens setup again if the countdown runs out.
WiFi failed	The middle line says why. Rejoin its setup network and try again.
Retrying shortly	Setup restarts by itself in under a minute. No need to unplug it.
No network - checking	It has WiFi saved but cannot reach it. It keeps trying.
Needs activation	Only after its card is replaced. Email support the device ID shown at its address; paste back the KR1- code.

Every message, with what to do: kiterelay.com/help/screens

Away from home, later

In the Network drawer on the control page, follow the steps under Tailscale. Install the Tailscale app on the phone or laptop you connect from, signed in to the same account.

A person answers
support@kiterelay.com

Full guide
kiterelay.com/setup

Questions
kiterelay.com/faq

For a computer you own, or one you are authorised to manage. The small-screen pictures are redrawn from the device; any address or password on them is an example.